


148GTL-F CIRCUIT DIAGRAM

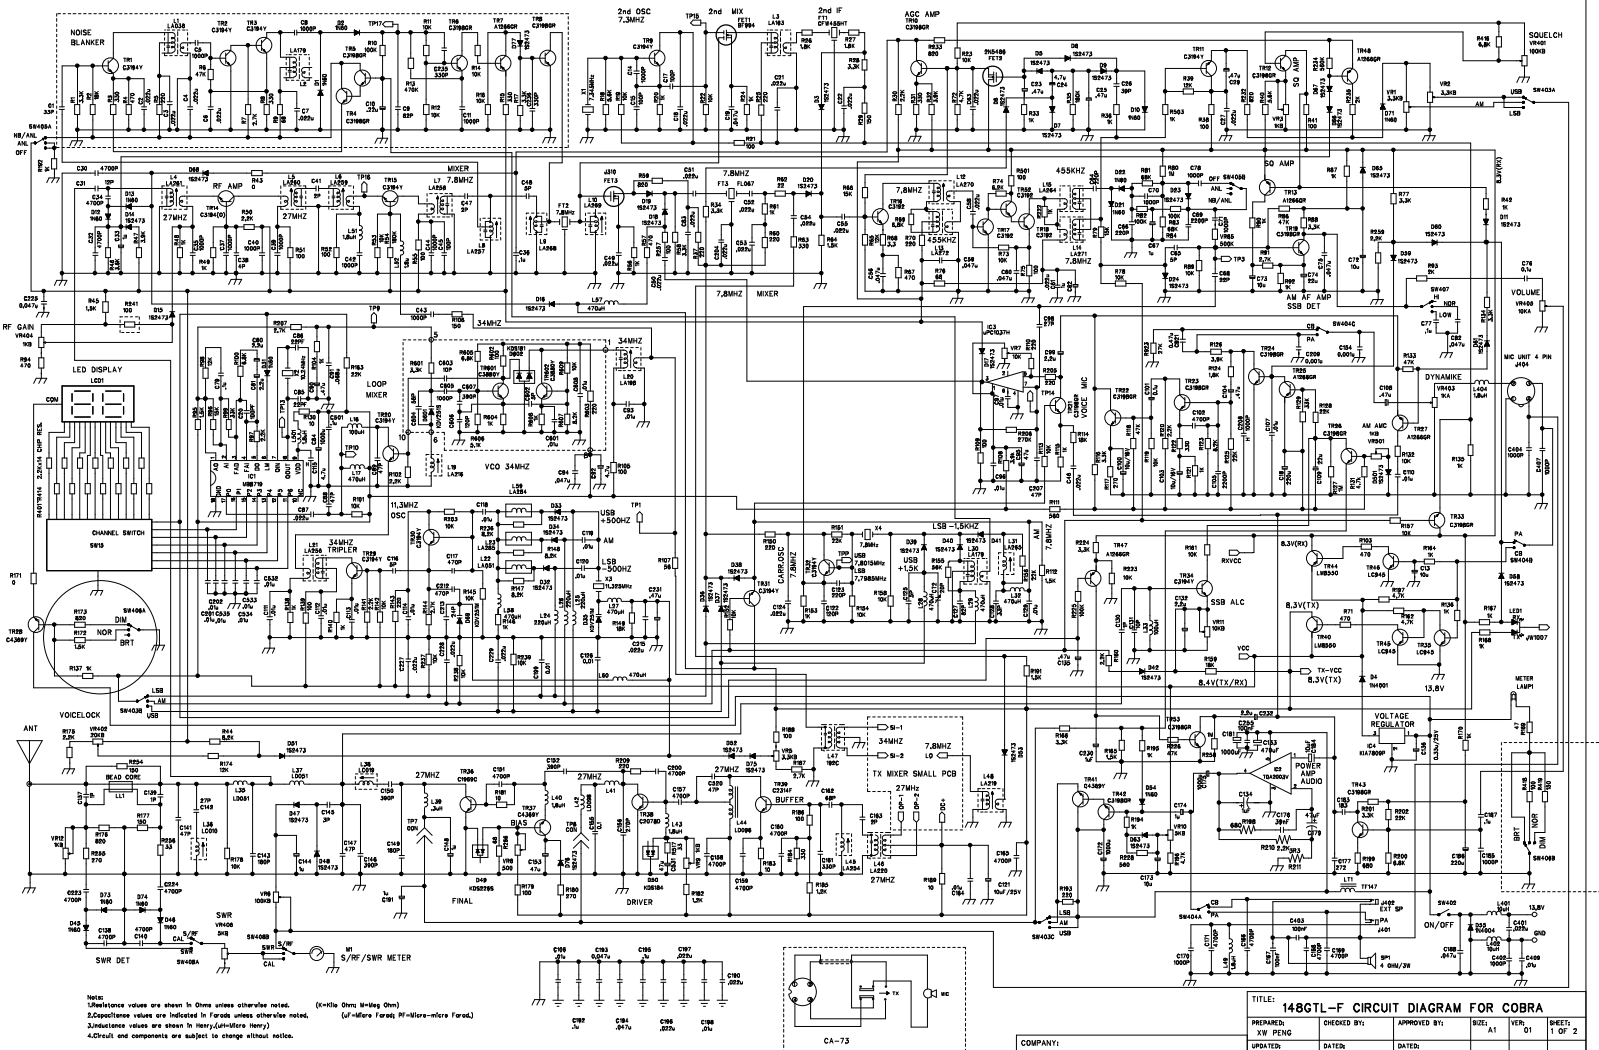

NOTE:
 1. Capacitance values are shown in Ohms unless otherwise noted. (C<10k Ohms Min-Wing Ohm)
 2. Capacitance values are indicated in Farads unless otherwise noted. (uF=Micro Farad; pF=Picofarad; nF=Nano Farad)
 3. Dimensions values are shown in Inches (unless otherwise noted).
 4. Circuit and components are subject to change without notice.

TITLE: 148GTL-F CIRCUIT DIAGRAM FOR COBRA

PREPARED BY: YW PENG
 CHECKED BY:
 APPROVED BY:
 DATE: JUN/27/2006

COMPANY:

SHEET: 1 OF 2

MIXER Circuit diagram for TDA6131 REPLACEMENT

